

USER GUIDE



Espace range alarm system

*You have just bought
a DAITEM security system,
designed to cover all your
protection needs.
We would like to thank you
for your confidence.*

*With TwinBand®,
and TwinPower®, you will
benefit from the flexibility
of a totally wire-free system
based on dual band radio
technology
and a doubly secure power
supply.*

IMPORTANT ADVICE

Your security system is simple to use. We advise you to switch it on (arm) every time you leave your home.

Do not leave your remote control in view.

Keep a back-up remote control in a secret place.

If one of the devices in your system is lost, stolen or sabotaged, call your installer right away.

Keep the access codes to your remote control keypads secret.

SOME PRECAUTIONS TO FOLLOW

When you are at home

Do not leave entrances (doors and windows) open for no reason.

Switch your system to partial protection mode (Part Set) to protect unoccupied rooms.

When you leave home

Close all the protected doors and windows.

Switch on (arm) your security system.

If necessary, check for any indications of faults or doors and windows left open.

When you're going to be away for a while

Check that all doors and windows are closed.

Check your security system is operating properly by actually testing it.

Switch on (arm) your system

IMPORTANT REMARK

The installer can access your system remotely in order to perform maintenance or uploading & downloading operations via a telephone and computer according to the conditions outlined in this guide. It is up to your installer to define with you the specific contractual conditions for accessing your system.

WE WOULD APPRECIATE YOUR SUGGESTIONS

If you have any comments about how we might improve our guides and our products, we would be grateful if you could send them in writing to:

Daitem - Service consommateur

rue du Pré de l'Orme - F-38926 CROLLES cedex

LÉGENDE

important points



recommendations



Correct programming is confirmed by a long beep or the green LED indicator lamp lighting up.



Incorrect programming is indicated by 3 beeps or the red LED indicator lamp flashing.

press once



press and hold



CONTENTS

Your DAITEM security system	4
Operating your security system	5
The information keypads provide information about device status and messages from the control panel	8
Modifying your access codes	9
Restricting access to control function	10
Regularly testing your system: Test mode	12
Performing a real test on your security system	13
Defining access for remote upload/download service computer operations	14
Your telephone dialler warns your designated correspondents or keyholders	15
The control panel indicates alarms and warns your correspondents or keyholders	18
The control panel indicates faults and warns your correspondents or keyholders	19
Checking the events log	20
Remotely operating your security system	21
Additional keypad functions	22

Product destination:

The equipment sold by DAITEM is designed to ensure better protection and more comfortable conditions in homes and a number of professional premises or to ensure the protection and well-being of individuals according to the technical and environmental limits described in the documents provided by DAITEM and recommended by retailers.

CE marking and regulations:

The products sold by DAITEM comply with the essential requirements of applicable European directives. CE marking provides proof of the products' compliance with these directives and with the standards defining the technical specifications to be followed.

Communication network (unavailability):


DAITEM reminds users that its systems operate via telecommunication networks (public switched telephone, radio, GSM networks, etc.), the availability of which cannot be 100% guaranteed.

DAITEM draws the user's attention to the fact that should the network being used become unavailable this may have consequences on the availability of its own systems.

Should this situation arise, independent of the will of DAITEM, neither DAITEM nor the manufacturer can be held liable for any damaging consequences that may ensue.

Ask your retailer for the guarantee and after-sales service application conditions binding it to the manufacturer.
--

YOUR DAITEM SECURITY SYSTEM

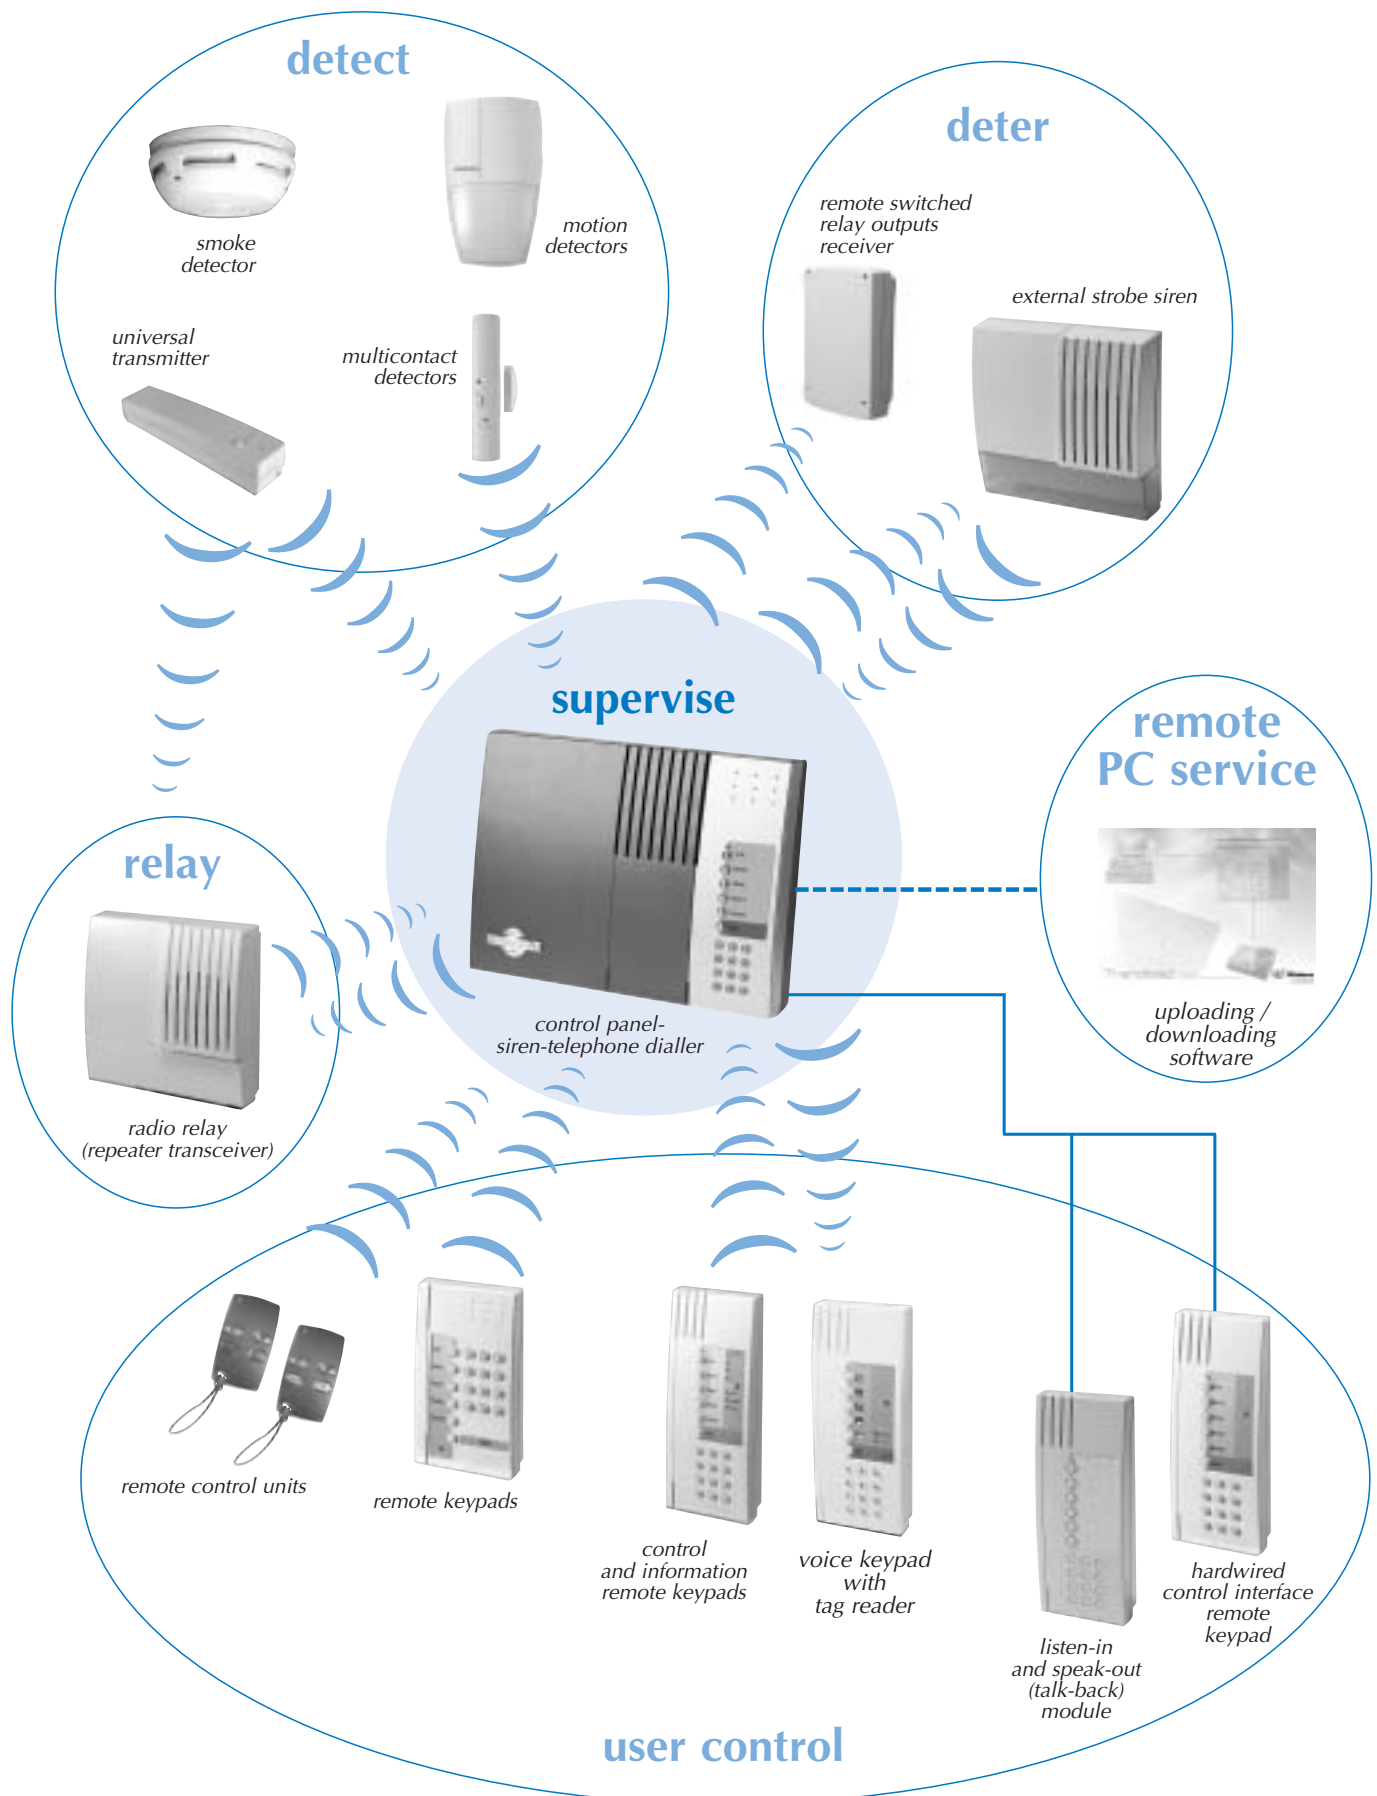


Daitem security system

OPERATING YOUR SECURITY SYSTEM

The control panel has up to 8* intrusion protection groups that can be operated separately or together.

Example: control panel with 4 active protection groups.

* The number of groups depends on the control panel model.

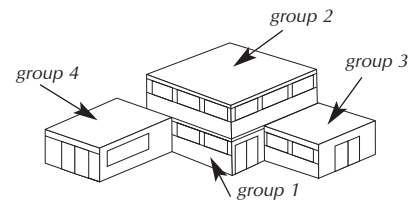


Switching your system ON or OFF

- Remote control unit: press **ON** or **OFF**


- Control keypads or interface:



 OFF
or
ON




- Keypad with tag reader:

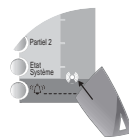

tag presented within 3 sec. after pressing

 OFF: all groups switched off (disarmed)



ON: all groups switched on (armed)


Switching your system ON for PARTIAL (part set) operation

- Remote control unit: press on Partial 1 or Partial 2


- Control keypads or interface:



 Partial 1
or
Partial 2




- Keypad with tag reader:

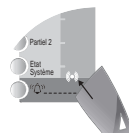

tag presented within 3 sec. after pressing

 Partial 1: group 1 only armed



Partial 2: group 2 only armed

ARMED PRESENCE (stay) mode

 
The control panel has a protection mode that makes it possible to arm group 1 only and cause the system to generate a discrete response in case of intrusion:

Armed Presence mode or stay mode.


- Control keypads or interface:



presence mode




- Keypad with tag reader:

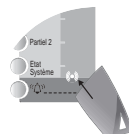


tag presented within 3 sec. after pressing

 Armed Presence mode: group 1 only is armed



 There is no **exit or entry time delay** in presence mode.

 group OFF


 group armed

User guide

OPERATING YOUR SECURITY SYSTEM (cont.)

Switching SEVERAL GROUPS ON and OFF*


- Control keypads or interface:

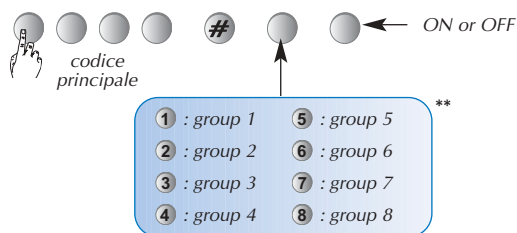

* The radio keypads can only control groups 1 to 4. To control groups 5 to 8, use a hardwired control interface remote keypad or a control panel keypad.




- Keypad with tag reader:

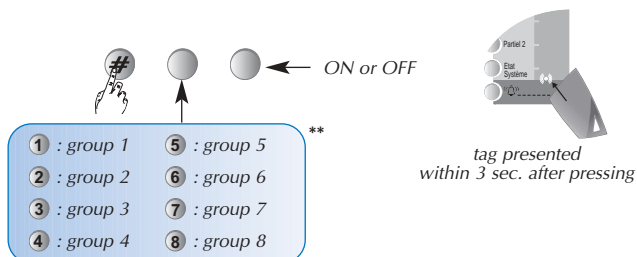


** The number of groups depends on the control panel model.

Examples using a keypad:

 - Arming group 3





- Arming group 1 + group 2


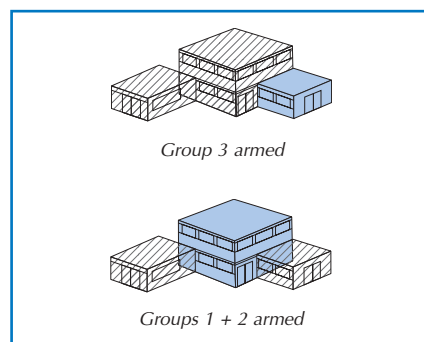


 

 
Examples using a keypad with tag reader:

- Switching off group 2

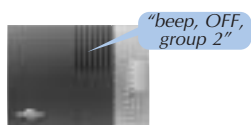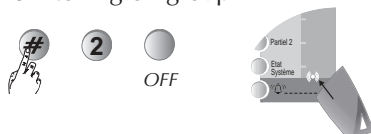

- Switching off group 1 + group 2

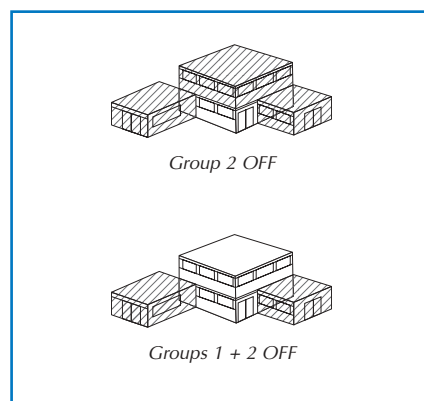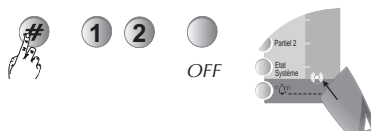


 group OFF  group armed  group unchanged

Daitem security system

Switching the system ON (Arming) when an ENTRANCE is OPEN or there is a FAULT

The control panel is factory configured to prevent the system from being armed when a protected entrance door fitted with a contact sensor point is open or there is a protection mechanism fault. This factory configuration can be modified by your installer.

Example: system armed with (an) entrance(s) open.

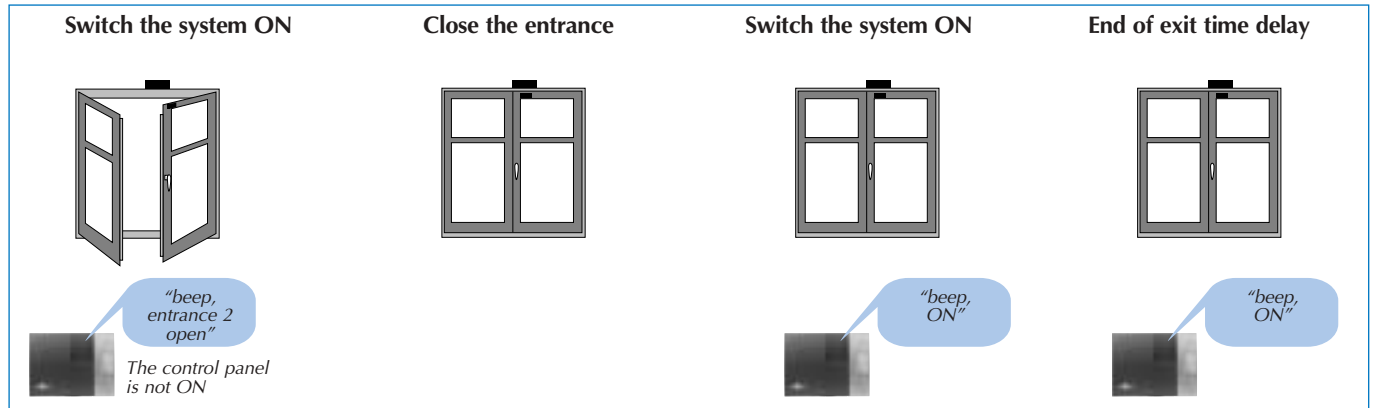

The system can be switched on and armed if there is no anti-tamper fault or entrance open.

SWITCHING OFF YOUR SYSTEM UNDER DURESS (feature only accessible through remote monitoring)

This feature allows you to discretely send out a warning if you are forced to disarm your alarm system under threat. The system behaves in exactly the same way as if you were disarming it but it sends a specific alert message to the remote central station monitoring company via the telephone line.



This duress option needs to be selected by your installation company and with the agreement of the central station monitoring company.

Entry time delay:

The entry time delay is the time you have to disarm (turn OFF) the system from inside the building (using a keypad for example) without triggering the alarm system. With the help of your installer you can determine the time delay best suited to the way you wish to use the system.

A **"protection active"** voice message and/or siren sounding can also tell you that your system is active and will trigger unless it is disarmed.

Exit time delay:

The exit time delay is the time you have to leave the building without triggering the alarm devices. With the help of your installer you can determine the time delay best suited to the way you wish to use the system.

The control panel indicates the end of the time delay by repeating the "system armed" voice message.


THE INFORMATION KEYPADS PROVIDE INFORMATION ABOUT DEVICE STATUS AND MESSAGES FROM THE CONTROL PANEL

The information keypads allow you to:

- operate your system,
- check the system's status at any time.

The voice keypads provide all control panel messages and indicate:

- the status of the protection groups,
- the status of the doors and windows which have contact sensors fitted,
- alarms,
- faults.

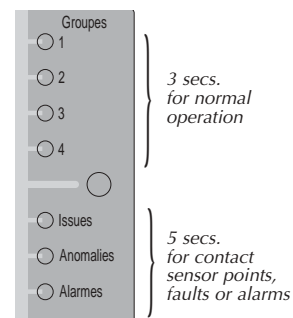

LED Indicator lamp and voice message indications:

System status	LED Indicator lamps lit							Voice message
	Group 1	Group 2	Group 3	Group 4	Contacts	Faults	Alarms	
OFF	G	G	G	G				"Beep, OFF"
Armed*	R	R	R	R				"Beep, Armed"
Partial 1	R							"beep, armed, partial 1"
Partial 2		R						"beep, armed, partial 2"
Armed group 1	R	X	X	X				"Beep, armed, group 1"
Armed group 2	X	R	X	X				"Beep, armed, group 2"
Armed group 3	X	X	R	X				"Beep, armed, group 3"
Armed group 4	X	X	X	R				"Beep, armed, group 4"
OFF group 1	G	X	X	X				"Beep, OFF, group 1"
OFF group 2	X	G	X	X				"Beep, OFF, group 2"
OFF group 3	X	X	G	X				"Beep, OFF, group 3"
OFF group 4	X	X	X	G				"Beep, OFF, group 4"
Presence (stay) mode	O							"Beep, armed, presence mode"
Alarm memory							R	"Beep, OFF, alarm system"
Fault memory						Y		"Beep, armed, fault, system"
Contact open					Y			"Beep, armed, contact X open"

* without anti-tamper system fault or entrance open

G green LED indicator lamp for 3 secs.: group OFF

X : status of groups unchanged

R red LED indicator lamp for 5 secs.: alarm indication

R red LED indicator lamp for 3 or 5 secs.: group armed

O orange LED indicator lamp for 3 secs.: control panel in presence mode

Y yellow LED indicator lamp for 5 secs.: faults or entrances open

 
Only the commands sent from the control and information keypad light the LED indicator lamps.
Only the commands issued from the voice keypad generate the above voice messages.
Commands issued by another control unit have no effect on the voice keypad.

Daitem security system

MODIFYING YOUR ACCESS CODES

Modifying your MASTER CODE

The master code provides the main user with access to all system controls.




Example (do not copy):



For reasons of security we recommend you change your keypad access codes regularly and keep the keys clean. To prevent any undesired calls to your remote monitoring company, do not end your master code with a "0".

Modifying your USER CODES

 The user codes limit access to specific functions. They are designed for occasional users.



Example (do not copy):


1456: user code 2



When a user code is saved it is automatically authorised. The user code authorisation sequence does not need to be entered again.

DISABLING or ENABLING your USER CODES

The following procedures enable or disable user codes without modifying their programming.

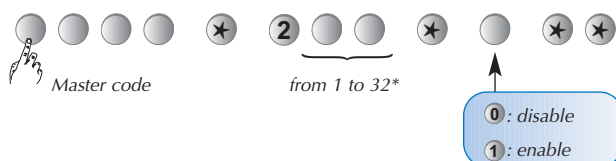

* The control keypad and control and information keypad have 4 user codes.
The control interface has 32 user codes depending on the control panel model.
The voice keypad with tag reader have 8 user codes.

User guide

RESTRICTING ACCESS TO CONTROL FUNCTIONS

 
RESTRICTING access with user code

The user codes can provide separate restricted access to:

- certain keypad control keys,
- certain groups.


Only the control keys or groups selected during the master programming can be accessed when a user code is entered.

To **allocate** a user code to (a) **certain key(s)** only, press:




Example:

 To **allocate user code 1** to **Partial 1** operation only, press:



 To **allocate** a user code to (a) **certain group(s)** only, press:



In this way the user code only allows the authorised groups to be armed or switched off (disarmed).

RESTRICTING access with tags

Tags may have separate access restricted to certain control keys and groups.

Only the commands and groups selected during programming are accessible when the tag is used.

- To **restrict** a tag to **certain control key(s)**, press:



Example, to **restrict tag 02** to **Partial 1** control, press:



- To **restrict** a tag to **certain group(s)**, press:




Example: to **restrict tag 01** to **Group 2**, press



Daitem security system

- To cancel tag restrictions, press:

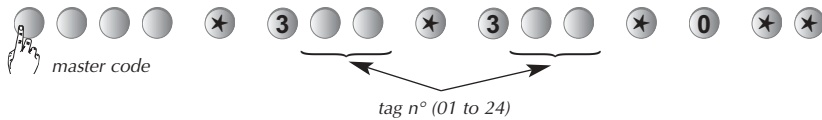


Example, to **cancel restrictions for tag 02**, press:



In this case, access restrictions for tag 02 are deleted.

- Combined restriction of a control key and a group

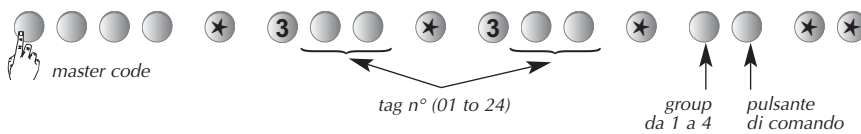

Example: to **restrict tag 01 to group 1 ARMED/OFF control** and to the **Partial 1** key, press:




In this case, only Group 1 ARMED and OFF control and the Partial 1 key are accessible using tag 01.

ENABLING and DISABLING a tag

A programmed tag is automatically enabled.

To **enable** or **disable** a tag, press:

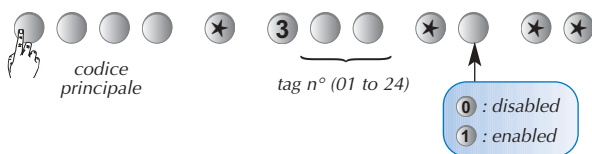

Examples:

- to **disable tag 01**, press:



- to **enable tag 02**, press:



REGULARLY TESTING YOUR SYSTEM: TEST MODE




Once a year or before going away for a long period, we advise you to test your security system.

The **test mode** will allow you to test each system unit.

Loud siren sounding can cause hearing problems and the necessary precautions must therefore be taken when testing device triggering.


1 Switch the control panel to test mode

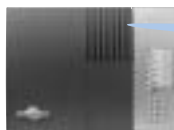

"beep, date, time, test mode"

2 Test each detector

- Move in front of each motion detector installed in rooms (offices, etc.).
- Check the system's voice message.

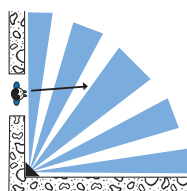

))))



"beep, intrusion, detector n°"



Before moving in front of an infrared detector, wait for 90 secs before entering the room where the detector is fitted.


- Open and then close all the entrances protected by door and window or multicontact detectors.
- Check the system's voice message.



))))



))))

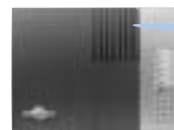

"beep, intrusion, detector n°"

3 Test each remote control unit

- Press the OFF button on each remote control.

or

- Enter your master code and press the OFF button on each keypad.



or



or



))))



"beep, OFF, remote control n°"

4 Test the alarm siren units

Press the Alert key on a remote control for more than 2 seconds.



Alert

Press for more than 2 secs



))))




Gradual siren sounding for 3 secs



Gradual siren sounding and strobe for 5 secs

5 Put the control panel back to user mode

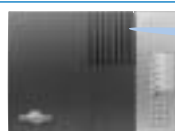

"beep, date, time, OFF"

Daitem security system

PERFORMING A REAL TEST ON YOUR SECURITY SYSTEM



You are now going to perform a real test on your security system. This test will trigger the alarm units and transmit a message to your remote central station monitoring company or individual correspondents by phone. We recommend you warn the person(s) in charge of remotely monitoring your system beforehand.

	1 Close all the entrances and leave the protected areas for at least 90 secs to allow any movement detectors to set.	
	2 Switch ON (ARM) the system <ul style="list-style-type: none">when it receives the ON command, the control panel responds: <i>"beep, armed"</i>	 <i>"beep, armed"</i>
	3 Wait until the end of the Exit time delay <ul style="list-style-type: none">the control panel announces: <i>"armed"</i>	<i>"armed"</i>
	4 After 90 secs enter a protected room <ul style="list-style-type: none">the control panel and siren are triggered,the telephone dialler calls the programmed correspondents depending on the type of event transmitted.	
	5 Let the sirens sound for 30 sec. and then switch OFF (disarm) the system. <ul style="list-style-type: none">on receipt of the OFF command, the sirens stop and the control panel responds: <i>"Beep, OFF, on 21 5 2005 at 7:30 PM, intrusion, detector 3, group 1"</i>.	 <i>"Beep, OFF, on 21 5 2005 at 7:30 PM, intrusion, detector 3, group 1"</i>
	6 Check the alarm was transmitted by phone to your programmed correspondents*.	

* When the call is to an individual alone, the system OFF command stops the call transmission to the correspondents.

 
DEFINING ACCESS FOR REMOTE UPLOADING/DOWNLOADING OPERATIONS

In compliance with current regulations, access to system uploading or downloading requires your explicit authorisation; this is why, by default, uploading/downloading operations are only authorised if your control panel is in Test mode (see page 13). Using the uploading/downloading software your installer can perform different operations remotely:


- remote configuration: to check or modify your system’s configuration,
- remote inhibition: to activate or inhibit one or several system devices,
- events log reading: to check the list of time and date-stamped system events that have occurred.

You can modify your installer’s uploading/downloading access rights and conditions. It is up to you to define the most suitable procedure to be adopted with your installer.

FORBIDDING access to uploading/downloading operations



 AUTHORISING access to uploading/downloading according to the code used and the system status



- ①: uploading/downloading code
- ②: engineer installer code
- ③: uploading/downloading and engineer installer code

- ①: system in test mode
- ①: inhibited
- ②: 24 hour* according to system status


* In 24 hour mode, access to uploading/downloading via the engineer installer code is not authorised if your system is ARMED.

Daitem security system

YOUR TELEPHONE DIALLER WARNS YOUR CORRESPONDENTS OR KEYHOLDERS




Procedure for a voice call to an individual

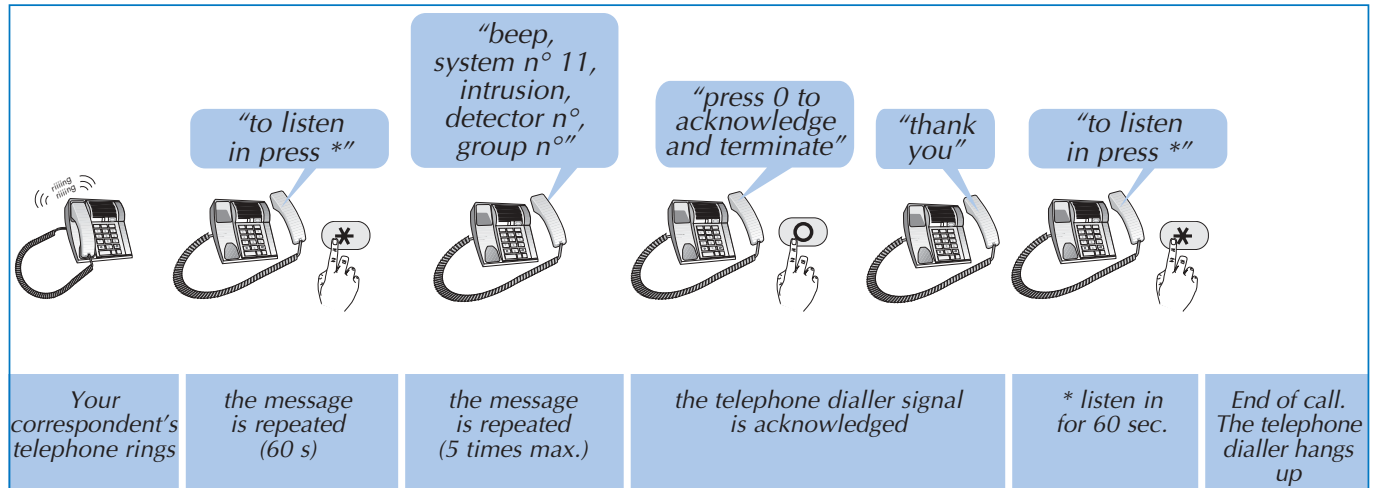

* To make it easier to listen in to the site, the control panel siren temporarily stops.



Procedure for a call to a remote central station monitoring company

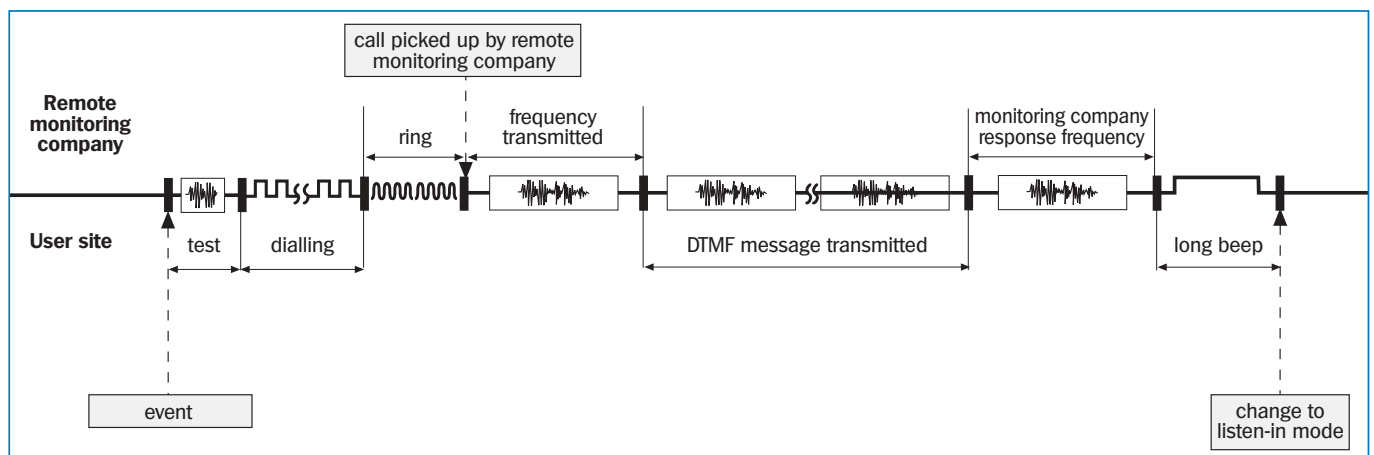

List of commands possible during the listen-in period

Depending on the alarm transmitted, you have access to a listen-in mode.

During this period, you can send commands using the keys on your telephone handset unit.


Type of command	Command n°
Command for all speak-out (talk-back) loud speakers	5 0
Command for all listen-in microphones	6 0
Repetition of listen-in period (1 min.)	#
Command to stop listen-in and terminate transmission	*

User guide

YOUR TELEPHONE DIALLER WARNS YOUR CORRESPONDENTS OR KEYHOLDERS (cont.)

SAVING or MODIFYING your correspondents' numbers

You can programme telephone numbers for your correspondents using the control interface. Memories 81 to 88 are dedicated to your correspondents' numbers. Memory 89 is dedicated to the information number.

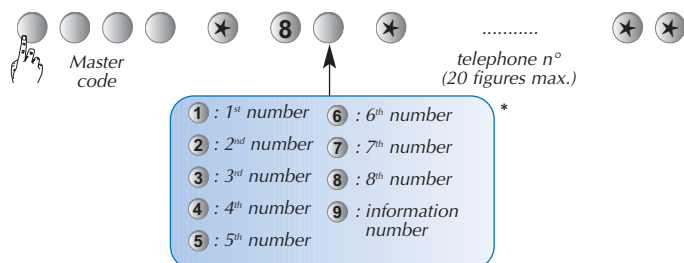


The telephone numbers must be different. If the memory is empty, the control panel generates a long beep at the end of the reading.

* The number of telephone numbers depends on the control panel model.

CHECKING and TESTING the numbers saved

You can check your correspondents' telephone numbers separately using the control panel keypad or the control interface.

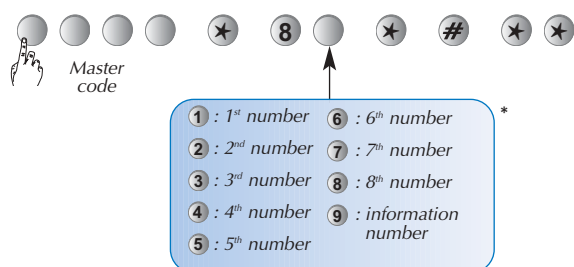


TESTING the call to your correspondents

You can test your correspondents' telephone numbers separately.




First let your correspondents know that you are going to perform a test call. We recommend that you systematically do this every time you save a new number.

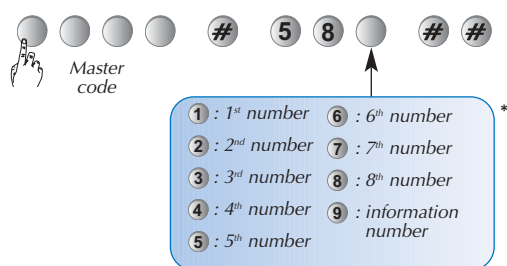


DELETING a saved NUMBER

You can delete your correspondents' telephone numbers separately.

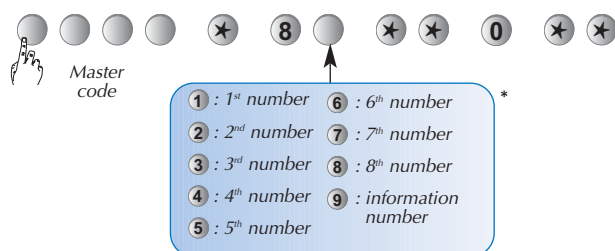

Daitem security system

Test call procedure

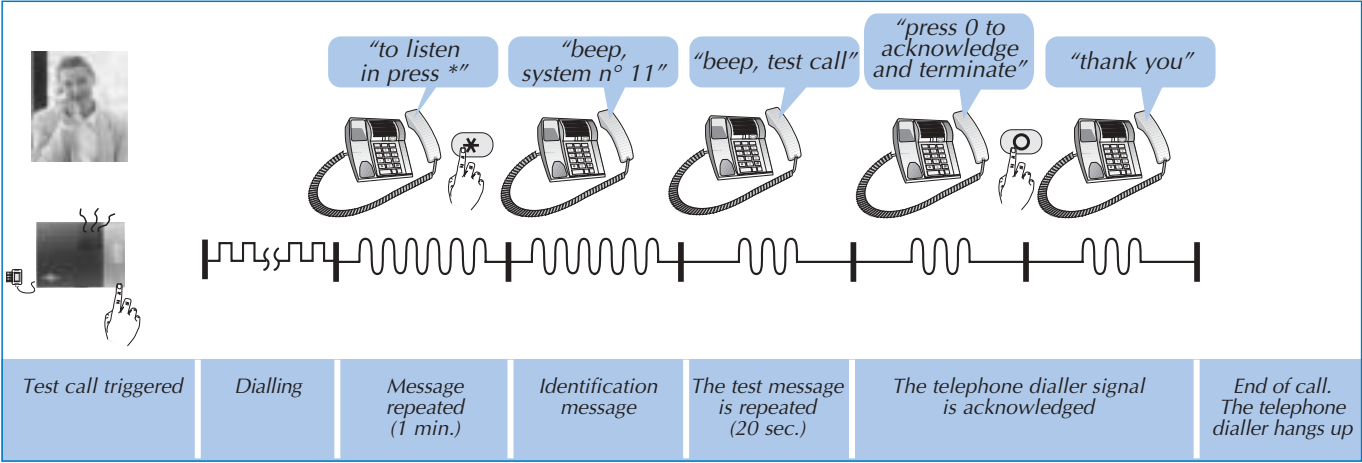

: press on "0" on the telephone handset unit to acknowledge and terminate the telephone transmission.

Telephone dialler call cycle procedure

Your first correspondent does not answer as s/he is already on the phone or has not terminated the call cycle correctly:

- the telephone dialler calls the number saved in the next memory,
- if none of the correspondents stop the call cycle, or they are all on the phone or not answering, the complete call sequence is carried out.

	Procedure	Acknowledgement and termination
Cycle 1: memory 81 memory 82 memory 83		For each cycle, if the 1st calls are not acknowledged, transmission continues on to the following numbers in the cycle. As soon as one of the cycle calls has been acknowledged, transmission stops. The last cycle is followed by the information call.
Cycle 2: memory 84 memory 85		
Cycle 3: memory 86 memory 87 memory 88		
Information call*: memory 89		

* For digital transmission to a remote monitoring central station company or voice transmission to an individual correspondent for information purposes (owner's mobile for example). This information call does not acknowledge and terminate the cycle.



Your installer can be warned of any problems with the system directly as well as by alarm transmissions.

User guide


THE CONTROL PANEL INDICATES ALARMS AND WARNS CORRESPONDENTS

- Alarms (intrusion, personal protection, technical problem, tampering or fire) are indicated:
 - when a Disarm command (switch OFF) is received,
 - when the system is remotely controlled.
- Voice indication specifies:
 - the date and time the alarm occurred,
 - the type of alarm,
 - the identity of the device generating the alarm.


Protection against intrusion

Control panel voice message	Events	Message transmitted
 "beep, date, time, intrusion, detector n°, group n°"	Intruder on premises.	BEEP; INTRUSION; DETECTOR N°, GROUP N°
 "beep, date, time, intrusion confirmed, detector n°, group n°"	Intruder moving about on premises.	BEEP; INTRUSION CONFIRMED; DETECTOR N°, GROUP N°



Personal Attack

Control panel voice message	Events	Message transmitted
 "beep, date, time, alert, remote control n°"	Alarm or silent alarm triggered by control unit.	BEEP; ALARM







Technical protection

Control panel voice message	Events	Message transmitted
 "beep, beep, beep, beep, technical alarm, detector n°"	Technical protection triggered by sensor associated with the universal transmitter.	BEEP; TECHNICAL ALARM; DETECTOR N°

Protection against fire

Control panel voice message	Events	Message transmitted
 "beep, date, time, fire alarm, detector n°"	Fire protection triggered by a detector.	BEEP; FIRE ALARM; DETECTOR N°
 "beep, date, time, fire alarm, remote control n°"	Fire protection triggered by a remote control unit.	BEEP; FIRE ALARM; REMOTE CONTROL N°

 Protection against system tampering

Control panel voice message	Events	Message transmitted
 "beep, date, time, tamper, remote control, control panel n°"	Attempt to open or remove a control interface.	BEEP; TAMPER; REMOTE CONTROL; CONTROL PANEL
 "beep, date, time, tamper, remote control n°"	Attempt to open or remove a keypad.	BEEP; TAMPER; REMOTE CONTROL N°
 "beep, date, time, tamper, control panel"	Attempt to remove or open the control panel.	BEEP; TAMPER; CONTROL PANEL
 "beep, date, time, tamper, siren n°, or, tamper, relay n°"	Attempt to remove a siren or radio repeater relay.	BEEP; TAMPER; SIREN N° or BEEP; TAMPER; RELAY N°
 "beep, date, time, tamper, detector n°, group n°"	Attempt to open or remove a detector.	BEEP; TAMPER; DETECTOR N°
 "beep, date, time, tamper, radio"	Radio jamming detected.	
 "beep, date, time, tamper, network"	Telephone line cut detected.	



 




The alarm memory is automatically deleted the next time the system is armed.

Daitem security system





THE CONTROL PANEL INDICATES FAULTS

- The control panel continuously monitors the state of system devices:
 - battery,
 - anti-tamper system,
 - telephone line availability,
 - radio link.
- The control panel indicates faults:
 - when an ARM or DISARM command is received,
 - by (remotely) checking system status.


Device battery failure

Control panel voice message	Events	Message transmitted
 "Beep, fault, battery, control panel"	Control panel battery low.	BEEP; FAULT; BATTERY; CONTROL PANEL
 "Beep, fault, battery, detector n°"	Detector battery low.	BEEP; FAULT; BATTERY; DETECTOR N°
 "Beep, fault, battery, siren n°"	Siren battery low.	BEEP; FAULT; BATTERY; SIREN N°
 "Beep, fault, battery, relay n°"	Radio repeater relay battery low.	BEEP; FAULT; BATTERY; RELAY N°
 "Beep, fault, battery, remote control n° or remote control, control panel"	Keypad or control interface battery low.	BEEP; FAULT; BATTERY; REMOTE CONTROL N° or BEEP; FAULT; BATTERY; REMOTE CONTROL; CONTROL PANEL

 



Device anti-tamper mechanism failure

 Control panel voice message	Events	Message transmitted
 "beep, fault, tamper, control panel"	Control panel anti-tamper system fault.	BEEP; FAULT; TAMPER; CONTROL PANEL
 "beep, fault, tamper, detector n°, group n°"	Detector anti-tamper system fault.	BEEP; FAULT; TAMPER; DETECTOR N°; GROUP N°
 "beep, fault, tamper, siren n° or tamper, relay n°"	Siren or radio repeater relay anti-tamper system fault.	BEEP; FAULT; TAMPER; SIREN N° or BEEP; FAULT; TAMPER; RELAY N°
 "beep, fault, tamper, remote control n°"	Control unit anti-tamper system fault.	BEEP; FAULT; TAMPER; REMOTE CONTROL N°

Telephone line fault

Control panel voice message	Events	Message transmitted
 "Beep, fault, network, control panel"	Connection fault or telephone line unavailable.	

Device radio link fault

Control panel voice message	Events	Message transmitted
 "Beep, fault, radio link, control panel"	Loss of control panel radio link.	BEEP; FAULT; RADIO LINK; CONTROL PANEL
 "Beep, fault, radio link, detector n°, group n°"	Loss of radio link between a detector and the control panel.	BEEP; FAULT; RADIO LINK; DETECTOR N°, GROUP N°
 "Beep, fault, radio link, siren n° or relay n°"	Loss of radio link between a siren or a radio repeater relay.	BEEP; FAULT; RADIO LINK; SIREN N° or BEEP; FAULT; RADIO LINK; RELAY N°
 "Beep, fault, radio link, remote control n°"	Loss of radio link between a keypad and the control panel.	BEEP; FAULT; RADIO LINK; REMOTE CONTROL N°

 
CHECKING THE EVENTS LOG




The events log contains the last 500 date and time-stamped events occurring in the system.

The events log records the following events:

- intrusion protection status changes,
- automatic inhibition of contacts on doors and windows remaining open,
- alarms,
- faults,
- system configuration modifications.

To access the events log locally using the control panel keypad:




-  **1** to move on to next event
-  **2** to repeat the event
-  **0** to end

Each event recorded in the log is described as follows:


- date and time,
- event name,
- identity of devices causing event.

Daitem security system

REMOTELY OPERATING YOUR SECURITY SYSTEM (if telephone module board installed)

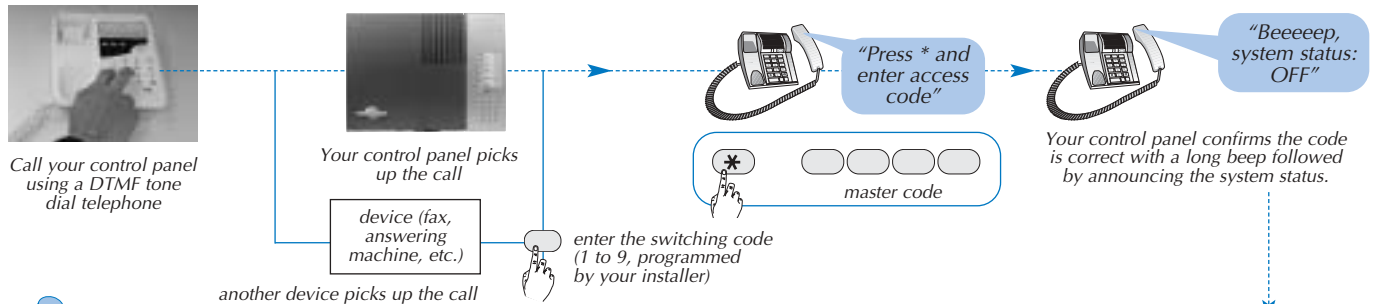

- After 20 secs. without receiving an order, your control panel stops and terminates the transmission.
- Pressing the * key on your telephone handset unit takes you back at any time to the voice menu at the start.

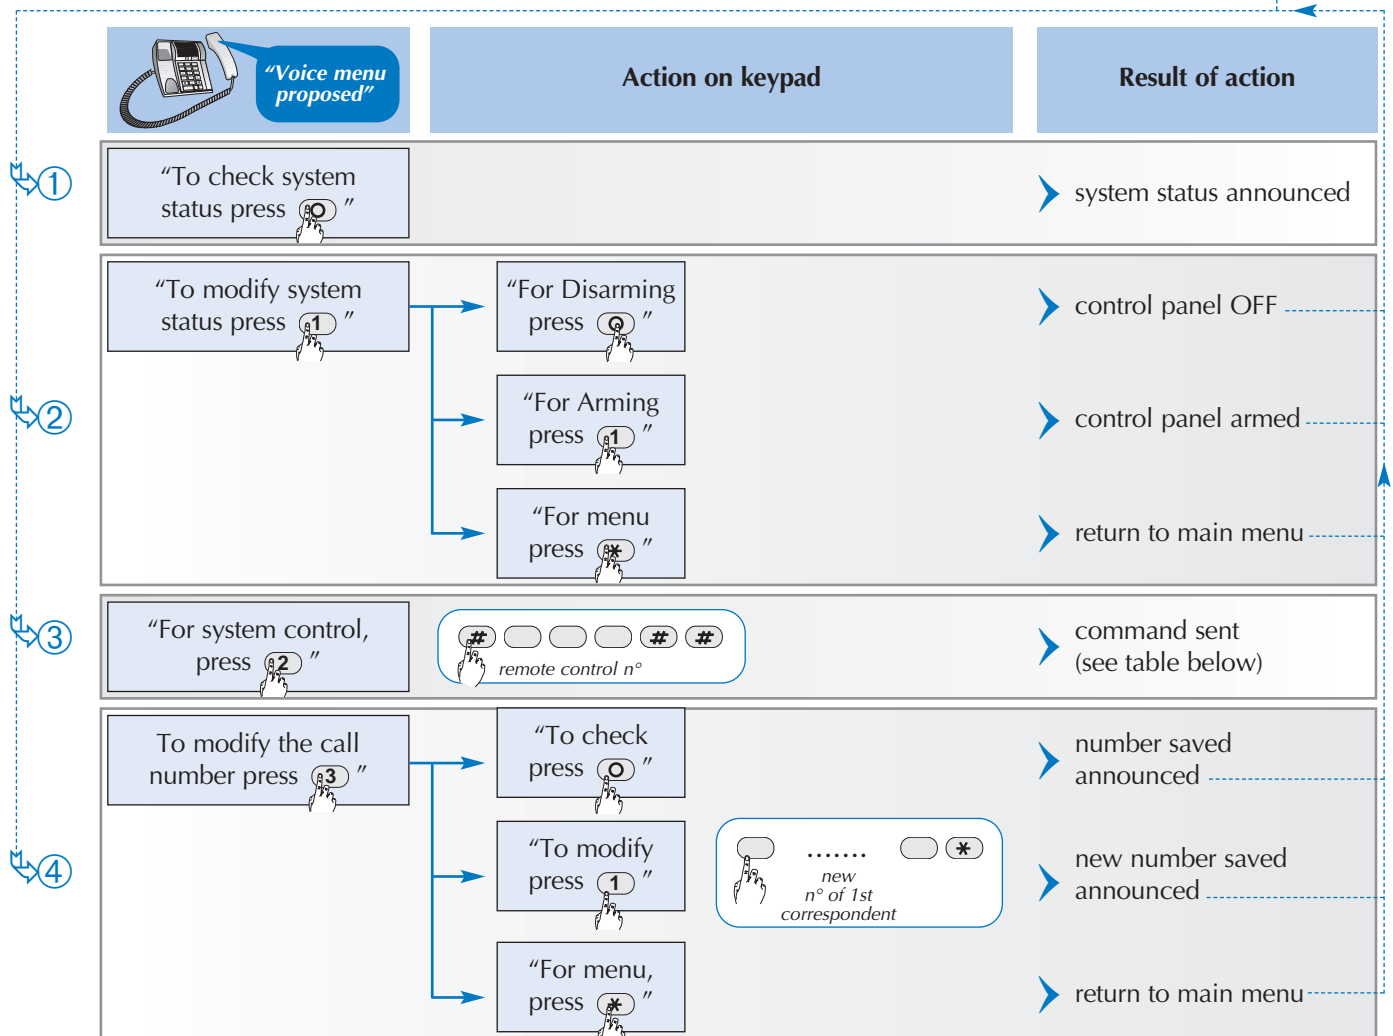


Command sent	Command n°	Command sent	Command n°	Command sent	Command n°	Command sent	Command n°
User mode	①	Pulse Relay 2	⑦ ①	OFF; Group 1 3	① ③ ⑨	Armed; Group 1 2	① ⑥ ⑦
Test mode	②	OFF Relay 2	⑦ ②	OFF; Group 2 3	① ④ ①	Armed; Group 3	① ⑥ ⑨
OFF	② ①	Armed Relay 2	⑦ ④	OFF; Group 1 2 3	① ④ ③	Armed; Group 1 3	① ⑦ ①
Armed	② ③	Pulse Relay 3	⑧ ①	OFF; Group 4	① ④ ⑤	Armed; Group 2 3	① ⑦ ③
Armed; Partial 1	② ⑤	OFF Relay 3	⑧ ②	OFF; Group 1 4	① ④ ⑦	Armed; Group 1 2 3	① ⑦ ⑤
Armed; Partial 2	② ⑦	Armed Relay 3	⑧ ④	OFF; Group 2 4	① ④ ⑨	Armed; Group 4	① ⑦ ⑦
Armed; Presence mode	③ ③	Pulse Relay 4	⑨ ①	OFF; Group 1 2 4	① ⑤ ①	Armed; Group 1 4	① ⑦ ⑨
Pulse light	⑤ ①	OFF Relay 4	⑨ ②	OFF; Group 3 4	① ⑤ ③	Armed; Group 2 4	① ⑧ ①
Light OFF	⑤ ②	Armed Relay 4	⑨ ④	OFF; Group 1 3 4	① ⑤ ⑤	Armed; Group 1 2 4	① ⑧ ③
Light ON	⑤ ④	OFF; Group 1	① ③ ①	OFF; Group 2 3 4	① ⑤ ⑦	Armed; Group 3 4	① ⑧ ⑤
Pulse Relay 1	⑥ ①	OFF; Group 2	① ③ ③	OFF; Group 1 2 3 4	① ⑤ ⑨	Armed; Group 1 3 4	① ⑧ ⑦
OFF Relay 1	⑥ ②	OFF; Group 1 2	① ③ ⑤	Armed; Group 1	① ⑥ ③	Armed; Group 2 3 4	① ⑧ ⑨
Armed Relay 1	⑥ ④	OFF; Group 3	① ③ ⑦	Armed; Group 2	① ⑥ ⑤	Armed; Group 1 2 3 4	① ⑨ ①


ADDITIONAL KEYPAD FUNCTIONS

Checking system status

 - Control keypads or interface:



- Keypad with tag reader:

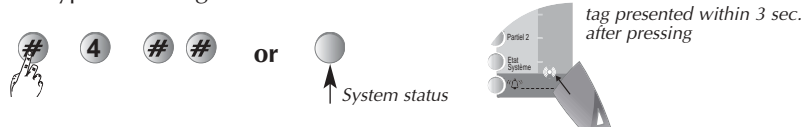


Silently operating your system

- Control keypads or interface:



- Keypad with tag reader:


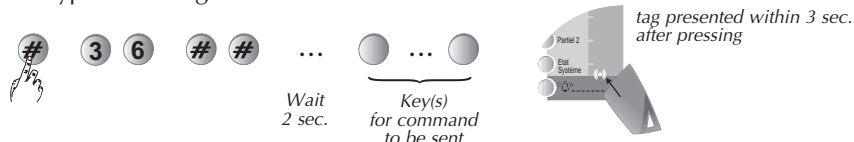


Triggering an alarm

- Control keypads or interface:



 - Keypad with tag reader:

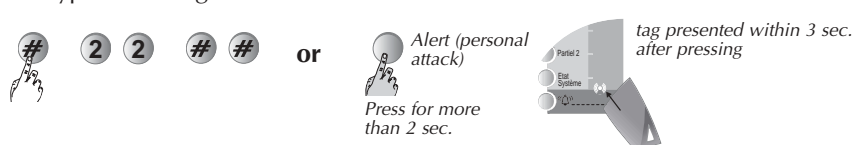

Loud siren sounding can cause hearing problems. The necessary precautions must therefore be taken when performing device triggering tests.

Triggering a silent alarm (if a keypad key has been programmed)

- Control keypads or interface:



- Keypad with tag reader:



Daitem security system

Triggering a fire alarm (if a keypad key has been programmed)

- Control keypads or interface:

 


- Keypad with tag reader:




Activating or de-activating the chime*

- Control interface:



 Changing your system to summer time or winter time*



* These functions can only be accessed using the hardwired control interface remote keypad or the control panel keypad.

